



				
9.1 stick sealing tape JTD SP 38 (JTF SP1) on the drip ledge	9.2 valley counter batten over the drip ledge.	9.3 apply the membrane and remove the tapes paper cover	9.4 stick membrane on the drip ledge	9.5 fix the membrane with staples to a side of valley counter batten
				
9.6 tape JUTADACH SP SUPER	9.7 stick the tape JTD SP SUPER over the staples	9.8 apply valley membrane stripe over the valley counter battens	9.9 - 9.10 The membrane overlaps of the valley stripe connect with tape JUTADACH SP 38	
				
9.11 - 9.13 apply the membrane from other side of the valley, make 5 cm interspace between counter battens and valley counter battens				
				
9.14 - 9.15 cover the ridge with stripe of membrane		9.16 valley counter battens - bottom view	9.17 breathable membrane – VALLEY BETWEEN ROOFS	

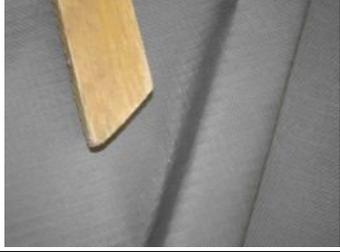

VALLEY BETWEEN ROOFS

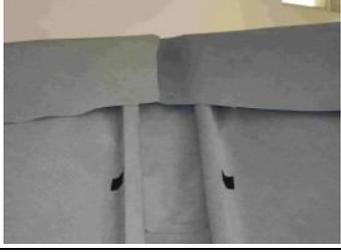

BREATHABLE MEMBRANE – VALLEY BETWEEN ROOFS

BREATHABLE MEMBRANE – INSTALATION – VALLEY BETWEEN ROOFS

- Lay down on boarding or on rafters the drip ledge and fix it (Obr. 9.1-9.2)
- Stick sealing tape JUTADACH SP 38 (JUTAFOL SP1) on the drip ledge (Obr. 9.3)
- Before You apply the membrane, fix valley counter batten over the drip ledge. (Obr. 9.2)
- Lay down breather roofing underlay horizontally (or vertically) across the roof slope over insulation or rafters. Start from the gutter side of the roof upward to the ridge, with overlaps of min. 10 cm (depends on the slope). Vertical connection of the membrane must be made over the rafter. (Obr. 9.4)
- The membrane is fixed to the boarding or rafters with non corrosive flat-headed nails or staples and only over the overlapping area!! Stick the membrane on the drip ledge with sealing tape JUTADACH SP 38 (or tape JUTAFOL SP 1) (Obr. 9.3) . Fix the membrane from side to a valley counter batten with staples. Each staple should be sealed by tape JUTADACH SP SUPER. (Obr. 9.5-9.7)
- Between the valley counter battens apply a stripe of membrane. The edges fix with staples over the valley counter battens. (Obr. 9.8, 9.11-9.12)
- In case of roof slope under 22° or in the valley between roofs, connection of overlaps with connecting tape is recomanded (integrated, or tape JDT SP 38) (Obr. 9.9-9.10)
- Counter battens are installed over the underlay and should not exceed 1,2 m. In case of roof slope under 22°, and in valley between roofs the sealing of counter battens with tape JUTAFOL TPK is recomanded. To create rain-resistant roof construction, sealing of counter battens with tape JUTADACH TPK SUPER is necessary.
- The counter battens height = the height of ventilated space (min. height is 40mm, depends on the roof slope) The battens for tiling are fixed to the counter battens leaving space between underlay and the battens for drainage and ventilation
- The counter battens height = the height of ventilated space (min. height is 40mm, depends on the roof slope). Make 5 cm interspace between counter battens and valley counter battens (Obr. 9.13-9.14).
- Cover the ridge with stripe of membrane (Obr. 9.15-9.16)